


## 18625 - PACIFICA CURVE STOOL

### PARTS LIST

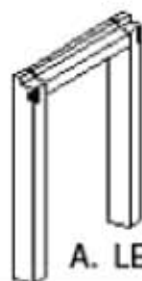

A. LEG 2 pcs



B. SEAT 1 pc



WOOD DOWELS 8 pcs

**GLUING:** Apply glue (provided) generously with a small brush (disposable watercolor paint brush). Apply on the mortise-and-tenon joints, the dowels (before inserting them) and the immediate area (shaded) where the leg piece (A) meets the seat piece (B). Wipe off excess glue with a damp cloth. For best results, allow 24 hours before using the furniture.

**NOTE:** Use a soft mallet hammer (not include) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

